


### TAU-EXM-01 HYFIRE TAURUS EXPANDER MODULE

# QUICK START GUIDE

# TAURUS My Hyfire

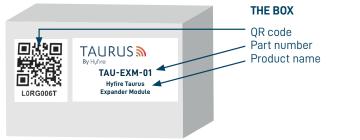


#### INSIDE THE BOX

- 1 x Expander Module
- 4 x Screws
- 1x Product Manual
- 1 x Ouick start guide
- 1 x QR code

#### MOUNTING STEPS

The Expander Module is IP65 rated, suitable for external mounting. The back box must be installed on the wall as flat as possible to retain IP rating, to prevent distortion of the housing and the ingress of contamination and/or moisture.

Proceed as follows to complete the device installation.

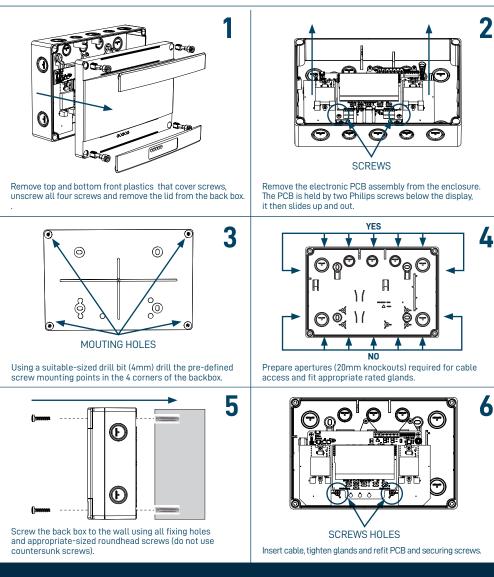

#### **IMPORTANT TO CONSIDER**

When mounting a wireless device a comprehensive radio survey should have been carried out to establish the location that provides the best coverage and optimum reach. Taking into consideration the building structure and materials, the survey identifies the wireless infrastructure required and product locations for optimum performance, identifying any factor that could prevent radio integrity.

Avoid fixing or mounting the unit close to the following:

- Equipment that utilises large electrical currents
- Large metal objects or structures
- Fluorescent lighting fittings
- Metal ceiling structures
- IT cabling.

Keep 2 meters minimum spacing between other wireless equipment in the area to avoid signal interference.

EN54 approved environmental temperature range is -10°C to +55°C

#### UNBOXING

- The Expander has removable top and bottom front plastics to cover screw housings.
- The Expander is housed in an IP65 rated box with knockouts for IP rated glands.
- 4 plastic screws are provided to secure the lid.

For more information, please refer to the complete product manual.




## TAU-EXM-01 HYFIRE TAURUS EXPANDER MODULE

# QUICK START GUIDE


8

F

# TAURUS By Hufire

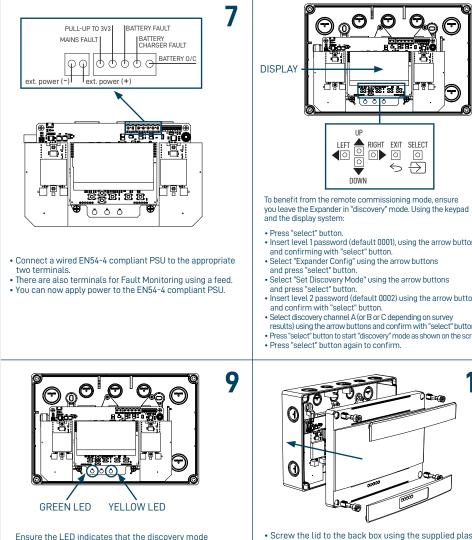

is enabled, alternating green and yellow colors.

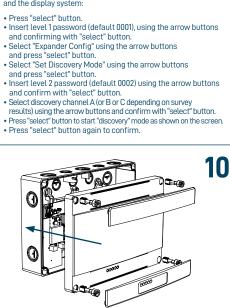

525 55

0 

- Screw the lid to the back box using the supplied plastic screws and refit top and bottom front plastics that cover screw housings.
- Put the QR code available in the box either on the system map or on the dedicated pages at the end of expander manual